

Changan Deepal G318 (REEV) Periodic Maintenance Schedule

Maintenance Items		Month	6	18	30	42	54	66	78	90	102	114	126	138	150	162	174	186	198	210	222	234	246		
		KM	5000	15000	25000	35000	45000	55000	65000	75000	85000	95000	105000	115000	125000	135000	145000	155000	165000	175000	185000	195000	205000		
1	Engine:-																								
	Oil & Filter Change (تغيير زيت + فلتر زيت) * Inspect engine for leakage (coolant, fuel, oil) \ (فحص وجود تسريب بالمحرك (سائل تبريد، وقود، زيت))	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Inspect Engine Idling & operation (with diagnostic tool) \ (فحص حدة المحرك على السلاسيه وفحص بجهاز تشخيص الاخطار)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	Air Filter \ (فلتر الهواء)	C	C	R	C	R	C	R	C	R	C	R	C	R	C	R	C	R	C	R	C	R	C	R	
	Fuel Filter Replace \ (تغيير فلتر الوقود)	Replace it every 4 years or 100,000 kilometers																							
	Spark plugs \ (بوجيهات)				R					R						R				R					R
	Canister Replace \ (تغيير كانبستر)	I	I	I	I	R	I	I	I	I	I	I	R	I	I	I	R	I	I	I	I	R	I	I	
	Inspect Cooling System (Radiator,Hoses,Connction) \ (فحص منظومة التبريد (ردياتور، خرطوم، وصلات))	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	Replace Engine Coolant \ (تغيير سائل التبريد)	Replace every 20,000 km																							
	Inspect Drive Bolt state and tension \ (فحص سير المجموعة)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Inspect Fuel System (Tank,Pipes,Connections) \ (فحص منظومة الوقود (تلك الوقود، خرطوم، وصلات))	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Inspect Exhaust system and heat shields \ (فحص منظومة العادم والعزل الحراري)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
2	Power Train:-																								
	Electric drive system reducer lubricating oil	Every 3 years or 60,000 km which is come first.																							
3	Lubricating oil and oil filter for front electric drive assembly	Replace the lubricating oil and oil filter every 5 years or 100,000 km. (Caution: This refers to the lubricating oil and oil filter of the four-wheel drive front electric drive.)																							
	E-drive ASSY connector (loose, damaged)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	E-drive ASSY grounding bolts and its wiring harness	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	E-drive ASSY cooling system (leakage, damaged, loose water pipe connection)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	E-drive ASSY reducer housing surface, half-axle oil seal, oil filler plug, oil drain plug, exhaust plug (oil leakage, damaged)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
	E-drive ASSY surface (clean, no attached dirt)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
4	Brake System:-																								
	Inspect Disc Brakes \ (فحص التبل والعاظير)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	Inspect Brake booster, lines, hoses and connections. \ (فحص خطوط ومواسير وصلات الفرامل)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
Brake Fluid \ (زيت الفرامل)	I	I	I	I	R	I	I	I	I	R	I	I	I	I	R	I	I	I	R	I	I	I	R		
5	Air Condition																								
	A/C Filter \ (فلتر التكييف (if equipped))	Suggest checking and replacing every 10,000																							
6	Electric System																								
	Inspect Battery \ (فحص البطارية)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	Inspect All Lights Operation and sunroof (If equipped) \ (فحص جميع الأتوار وعمل فتحة السقف (في حدة وجود فتحة سقف))	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	High-voltage wiring harness connecting bolts (loose, damaged)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	High voltage wiring harness connection terminal (damaged)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	High voltage wiring harness surface (damaged)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	Is the surface of the battery assembly damaged?	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A		
	Battery assembly mounting bolts (loose, damaged)	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A	I.A		
	Insulation resistance	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R		
	Battery cell pressure difference	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R		
Inspect Horn Operation \ (فحص عمل الكلاكس)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
Inspect Wiper Blades Operation & Fluid \ (فحص ريش المساحات ومستوى سائل المساحات)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			
6	Chassis:-																								
	Inspect (CV) universal joint boot damage \ (فحص حدة كارترش الكوبلن)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I		
	Inspect Tires Condition, Pressure & Adjust \ (فحص حدة الإطارات و ضغط الإطارات)	I	I.A	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R	I.A.R											
Inspect and tighten Suspension \ (فحص و ربط منظومة التعليق)	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I			

I:inspect, R: replace, C: clean, A: Adjustment **Check the engine oil level and leak every 500 km or before starting long trip